IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Always unplug appliance from electrical outlet immediately after using (except when charging unit).

2. Do not place or store appliance where it could fall or be pulled into a tub or sink.

3. Do not use appliance while bathing or in the shower.

4. Do not place appliance in, or drop into, water or other liquid.

5. If appliance has fallen into water, do not reach for it. Unplug immediately.

6. Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER

WARNING – To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Never leave a plugged-in appliance unattended.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.

4. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.

5. Keep the appliance cord away from heated surfaces.

6. Do not pull, twist or wrap the cord around the appliance.

7. Never drop or insert any object into any opening of the appliance.

8. Do not place the appliance on any surface while it is operating.

9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.

10. Do not use the appliance outdoors or where aerosol (spray) products are being used or oxygen is being administered.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS:

Before using the Class 2 Power Supply, read these instructions carefully.

Model: SW-038011A

Rated input voltage: 120Vac, 60Hz, 0.2 Amax

Rated output: 3.8VDC, -110mA

OPERATION

1. For dry location use only. Do not expose to water.

2. When not in use, unplug unit completely.

3. Never operate this unit if the specification is out of the rating.

4. When using this unit, a warm temperature will be reached.

CAUTION

1. Risk of electric shock, dry location use only or do not expose to liquid, vapor, or rain.

2. Do not short the polarity (output cord). Ensure jack is plugged into the Trimmer unit before plugging the adaptor into the outlet.

3. Do not operate any appliance which has a damaged output cord or housing.

4. Always unplug the unit before cleaning or when not in use.

5. This power unit is intended to be correctly oriented in a vertical or floor mount position.

6. Be sure voltage is in correct voltage before plugging in.

TROUBLESHOOTING

If your rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plugging in another appliance to test the outlet.

2. Make sure the electrical plug is not connected to a switch which turns power off when lights are turned off.

3. Be sure you have inserted the adapter properly into the trimmer, that all connections are secure, and that the trimmer switch is in the "OFF" position.

OPERATING INSTRUCTIONS

1. Before using the clipper for the first time, charge continuously for 16 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles.

2. Always check to see if the charging light is on when you firmly connect the unit with the adapter.

3. Plug the adaptor into any wall outlet (at the voltage listed on the label affixed to the adaptor). Unplug adaptor when not in use.

4. The adaptor may become warm while charging. This is normal.

5. Preserving the batteries: in order to maintain the optimum capacity of the rechargeable batteries, the clipper should be recharged for 16 hours approximately every 3 months.

USER MAINTENANCE INSTRUCTIONS

OILING THE BLADE (oil not included)

About once a month you should oil the trimmer blade with a light mineral oil. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.)

BLADE CARE

Because the trimmer blade is precision-made for a very special use, it should always be handled with care. Each time you finish using the trimmer, brush away any loose hair that has collected in the blade.

Be especially careful when changing or adjusting blade. When you have your trimmer serviced, be sure that the blade is sharpened or replaced at the same time.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard and mustache.

THREE POSITION TAPER CONTROL

The Conair trimmer taper control switch is positioned at the back of the unit. You can hold the trimmer in your hand and adjust the switch as needed. The taper control eliminates the need in some situations for an attachment comb because it lets you gradually adjust the closeness of the cut. For closest cut and shortest hair, push switch all the way to level #3. This is the setting to use for the 2 day shave look. To increase the cutting length, slowly push control down to level #2 or #1 for longer cut. Note that too much clipped hair on the clipper can slow down its operation. To remove it without removing the blades simply use the enclosed cleaning brush and gently sweep away the clipped hair from cutting surfaces.

Note: The taper control only works with the facial hair trimmer.

GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:

1. The shape and dimensions of your face.

2. The natural growth of your beard/ mustache.

3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

TYPES OF BEARDS/MUSTACHES

GETTING STARTED:

OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

NOW YOU'RE READY TO TRIM YOUR BEARD

1. The trimmer includes a five position comb for use with the hair trimming blade (2-10mm) which provide lengths of 3/32" (shortest) to 3/8" (longest).

2. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)

4. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 3/32" or 5/32") and go over your beard again until you achieve the desired length.

BLENDING THE JAWLINE

1. The two jawline attachments; AC14 which provides lengths of 3mm (shortest) and the AC13 which provides lengths of 5mm (longest), will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position.

2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.

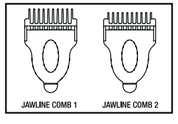

TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.

2. Comb through your mustache in the direction it grows.

3. Place the 5-position comb over the facial hair blade and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.) **Always trim your mustache from the top down**

4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blade only, define the outline of the bottom of your mustache.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO
MANTÉNGALO ALEJADO DEL AGUA

PELIGRO – Cualquier aparato enchufado permanece bajo tensión, aunque este apagado. Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo (al menos que lo esté cargando).

2. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.

3. No lo use en el baño o la ducha.

4. No coloque el aparato ni lo deje caer al agua u otro líquido.

5. No trate de alcanzar el aparato después de que hubiese caído al agua. Desconéctelo inmediatamente.

6. Desconecte el aparato antes de limpiarlo.

NO TRATE DE ALCANZAR LA UNIDAD EN EL AGUA

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. Nunca deje el aparato desatendido mientras esté conectado.

2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.

3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante. No utilice una extensión con este aparato.

4. No opere este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.

5. Mantenga el cable alejado de superficies calientes.

6. No jale, retuerza ni enrolle el cable alrededor del aparato.

7. Nunca deje caer ni inserte un objeto en ninguna de las aberturas.

8. No coloque el aparato en ninguna superficie mientras este funcionando.

9. No utilice este aparato con un peine-guía roto o faltaríamo o si faltaran dientes a la cuchilla. Esto podría provocar una herida. Asegúrese que las cuchillas estén debidamente alineadas y lubricadas antes de usarlo.

10. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

GUARDE ESTAS INSTRUCCIONES
PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACIÓN

Lea las instrucciones cuidadosamente antes de utilizar el adaptador de clase 2.

Potencia nominal de entrada: 120V C.A., 60HZ, 0.2 Amp. max

Potencia nominal de salida: 3.8V C.D., 110mA

OPERACIÓN

1. Para uso en lugares secos únicamente. No lo expongá al agua.

2. Desenchufe el aparato cuando no esté en uso.

3. Siempre respete las especificaciones eléctricas. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.

4. El aparato puede volverse caliente durante el uso.

PRECAUCIÓN

1. Riesgo de electrocución. Utilícelo en un lugar seco únicamente. No lo expongá a ningún tipo de líquido, a la lluvia o al vapor.

2. No conectarlo el cordón. Siempre conecte el cordón al aparato antes de enchufar el adaptador en el tomacorriente.

3. No opere el adaptador si su cuerpo o el cordón estuviesen dañados.

4. Siempre desconecte el adaptador después de usarlo y antes de limpiarlo.

5. El adaptador siempre debe usarse en posición vertical.

6. Nunca enchufe el cordón en un tomacorriente que no sea del voltaje adecuado.

RESOLUCIÓN DE PROBLEMAS

Si su aparato no funciona, siga los pasos siguientes antes de regresarlo a un centro de servicio:

1. Conecte otro aparato al tomacorriente para asegurarse que esté funcionando.

2. Asegúrese que el tomacorriente no esté conectado a un interruptor que controla la luz.

3. Asegúrese que el adaptador esté debidamente conectado al aparato, que todas las conexiones estén seguras y que el interruptor del aparato esté en la posición de apagado "OFF".

INSTRUCCIONES DE OPERACIÓN

1. Cargue el aparato durante 16 horas antes de usarlo por primera vez. La batería recargable alcanzará su capacidad máxima después de 3 ciclos de carga/descarga.

2. Siempre averigüe que la luz de carga esté encendida.

3. Enchufe el adaptador. Averigüe el voltaje indicado en la etiqueta del adaptador antes de enchufarlo. Desconecte el adaptador después de usarlo.

4. Puede que el adaptador se vuelva caliente. Esto es normal.

5. Para lograr un desempeño óptimo y mantener la capacidad de la batería recargable, cargue el aparato durante 16 horas cada tres meses.

Su cortadora está equipada con un botón regulador que permite ajustar el largo del corte a media que corta. El botón regulador, ubicado en la parte trasera del aparato, permite ajustar gradualmente el corte, más largo o más corto, sin necesidad de instalar una guía. Para un corte más corto, deslice el botón hacia arriba, hasta la posición 3. Esto le dará la garantía de una barba de 2 días. Para un corte más largo, deslice el botón hacia abajo, hasta la posición 2 ó 1. Su cortadora puede perder velocidad si recortes de pelo están atrapados en las cuchillas. Para limpiar las cuchillas sin tener que desarmarlas, utilice el cepillo de limpieza provisto.

Nota: El botón regulador de corte solamente funciona con la cuchilla para barba y bigote.

BARBAS Y BIGOTES

El tipo de barba o de bigote que más conviene a su rostro depende de:

1. La forma y el tamaño de su rostro.

2. La forma del crecimiento natural de su barba o de su bigote.

3. El espesor de su barba o de su bigote. Si no está seguro del tipo de barba o bigote que le conviene, pida consejo a un barbero. Después de dar forma a su barba o a su bigote, deberá mantener su aspecto, usando la cortadora una vez por semana.

Para lograr resultados óptimos, humedezca ligeramente su barba antes de recortarla (no la moje). Esto evitará cortar demasiado pelo.

TIPOS DE BARBAS Y BIGOTES



BOTÓN REGULADOR CON 3 POSICIONES

IGUALAR LA CUJADA

1. Las guías para la quijada (la guía AC14 que corta el pelo a 3 mm y la guía AC13 que corta el pelo a 5 mm) le permitirán lograr un recorte neto y preciso. Instale la guía encima de la cuchilla para barba/bigote.

2. Sostenga la cortadora recta y corte el pelo usando pequeños movimientos uniformes.

3. Después de terminar, apague el aparato y retire el accesorio.

CÓMO CORTAR SU BARBA

EL CONTORNEO

1. Se le hará más fácil el contorneo y el recorte si su barba está limpia y ligeramente humedecida.

2. Peine la barba en la dirección del crecimiento natural del pelo antes de empezar a darle forma.

3. Dé forma a su barba empezando debajo de la quijada y subiendo hacia la oreja, en cada lado del rostro. Siga dando forma a la línea de la mejilla, a las patillas y a la línea de nacimiento del cabello.

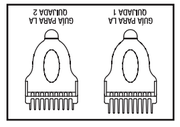

CÓMO CORTAR SU BIGOTE

1. Se le hará más fácil cortar su bigote si está limpio y ligeramente humedecido.

2. Peine su bigote en la dirección del crecimiento natural del pelo.

3. Instale la guía de 5 posiciones sobre las cuchillas. Empiece con la posición más larga (siempre podrá volver a acortar el bigote).

SIEMPRE CORTE SU BIGOTE DESDE ARRIBA HASTA ABAJO

4. Después de terminar, retire la guía y dé forma a la parte inferior de su bigote.

Para mantener el aparato, deslice e interruptor hacia las cuchillas. Para apagarlo, deslícelo hacia atrás.

INTERRUPTOR

4. Si desea un recorte aún más corto, escoja un largo de recorte más corto, como 2 ó 4 mm, y siga acortando su barba hasta conseguir el tamaño deseado.



3. Empiece a cortar su barba con movimientos parejos y suaves, desde las patillas hasta la quijada. Nunca corte en la dirección opuesta al crecimiento natural del pelo. El recorte resultará demasiado corto.

MANTENIMIENTO DE SU CORTADORA

CAMBIO DEL JUEGO DE CUCHILLAS

Para sacar el juego de cuchillas: apague el aparato (OFF). Sostenga el aparato con el botón de encendido/apagado frente su cuerpo y empuje la cuchilla pequeña con el pulgar para desencajar el juego de cuchillas. Para instalar el juego de cuchillas: ensarte el juego de cuchillas sobre el cabezal y empuje la cuchilla grande para encajarlo. Asegúrese que el botón regulador esté en la posición más larga antes de instalar las cuchillas.

1. Saque los tornillos ubicados en la parte trasera del aparato con un pequeño destornillador cruciforme.
2. Abra el cuerpo del aparato y retire las baterías. Lleve las baterías al centro de reciclaje más cercano. NO tire las baterías con el resto de la basura.

ESTE APARATO CONTIENE UNA BATERÍA RECARGABLE DE NÍQUEL-CADMIO. LA CUAL DEBE RECICLARSE AL FINAL DE SU VIDA ÚTIL. SEGÚN LAS LEYES VIGENTES. NO TIRE LA BATERÍA CON EL RESTO DE LA BASURA.

1-800-822-8837

MODELO GMT10CS
CORTADORA DE BARBA/BIGOTE

Cuchilla para barba/bigote

Cortadora multiuso

Guía ajustable con 5 posiciones

Guías para la quijada

Adaptador

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US$3.00 por gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

©2010 Conair Corporation

Centro de servicio:
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

09PG17587

IB-9732

NOVEDADES FASCINANTES DE CONAIR

Juego de peluquería de 25 piezas con potente motor de corriente directa, botón turbo, cuchilla para el cabello, cuchilla para la barba y el bigote, 10 guías, palanca reguladora para lograr 55 largos de recorte y estuche de almacenaje.

5POS-189

2JAW-189

Cortar aquí

FORMULARIO DE PEDIDO – PARTES DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 1ero de junio del 2011. Agradeceremos los pedidos enviados después de esta fecha y le informaremos de cualquier cambio de precio.

DESCRIPCIÓN	NÚMERO	PRECIO	CANTIDAD	TOTAL
Guía con 5 posiciones	5POS-189	$2.25		
2 guías para la quijada	2JAW-189	$5.50		

Subtotal	
*Impuesto a la venta	
TOTAL	

Favor de incluir un cheque o giro postal al nombre de Conair (sentimos no poder aceptar dinero en efectivo, estampillas, ni pedidos contra reembolso). Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido mínimo de $10.00, de lo contrario se sumará $2.00 al pedido por gastos administrativos.

Los precios incluyen gastos de manejo y envío.
Los precios están sujetos a cambio sin previo aviso. Precios válidos únicamente para envíos en la parte continental de los EE.UU.

La entrega demora entre 4 y 6 semanas.

Para evitar demoras, por favor escriba claramente. Favor de incluir su dirección completa; UPS no puede hacer entregas a casillas postales.

NOMBRE _____

DIRECCIÓN _____

CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____

TELÉFONO ( ) _____ *(en caso de pregunta)*

Para información sobre otras partes de repuesto y accesorios, llame al: 1-800-3-CONAIR.

Enviar a:
Conair Corporation
Service Department
150 Milford Road,
East Windsor, NJ 08520

5POS-189

2JAW-189

CORTADORA DE BARBA/BIGOTE

Modelo GMT10CS

RECARGABLE

CONAIR®

Instrucciones

Inalámbrica
Recargable

ON/OFF SWITCH

To operate, simply slide switch toward blade, to stop push slide away from blade.

CARE OF YOUR TRIMMER

REPLACEMENT (REMOVAL) OF BLADE SET

To remove blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place. Make sure the control is set to the lowest position when reattaching the blade set.

1. Using a small Phillips head screwdriver, remove the screws at the back of the trimmer.

2. Remove the bottom housing and push the batteries out. Bring the batteries to the nearest collection center for proper disposal. DO NOT throw the battery into the normal municipal waste system.

CONTAINS NICKEL CADMIUM BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.

MODEL GMT10CS
BEARD/MUSTACHE TRIMMER

Facial Hair Blade

Multi-use Beard & Mustache Trimmer

5-position Adjustable Comb

Jawline Combs

Adapter

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

©2010 Conair Corporation

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

09PG17587

IB-9732

EXCITING ITEMS FROM CONAIR

25 Piece Deluxe Haircut Kit with a powerful DC motor and turbo charge also includes a clipper and trimmer blade set, 10 attachment combs, 55 taper control settings and a storage case.

CUT HERE

TRIMMER REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through June 1, 2011. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
5-Position Attachment Comb	5POS-189	$2.25		
2 Jawline Combs	2JAW-189	$5.50		

Subtotal	
*Sales Tax	
TOTAL	

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of $10.00 or a $2.00 handling charge will be added to order.

All prices include handling and return postage.
Prices are subject to change without notice.
Prices are valid only for shipments within the Continental United States.
Please allow 4-6 weeks for delivery.

To avoid delays, please print clearly.
We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____

ADDRESS _____ APT. _____

CITY _____ STATE _____ ZIP _____

TELEPHONE ( ) _____ *(We call only if we have a question about your order.)*

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

BEARD & MUSTACHE TRIMMER

Cordless Rechargeable

Instruction Booklet

CONAIR®

RECHARGEABLE

Model GMT10CS